


Friction Wedge Interchangeability Matrix

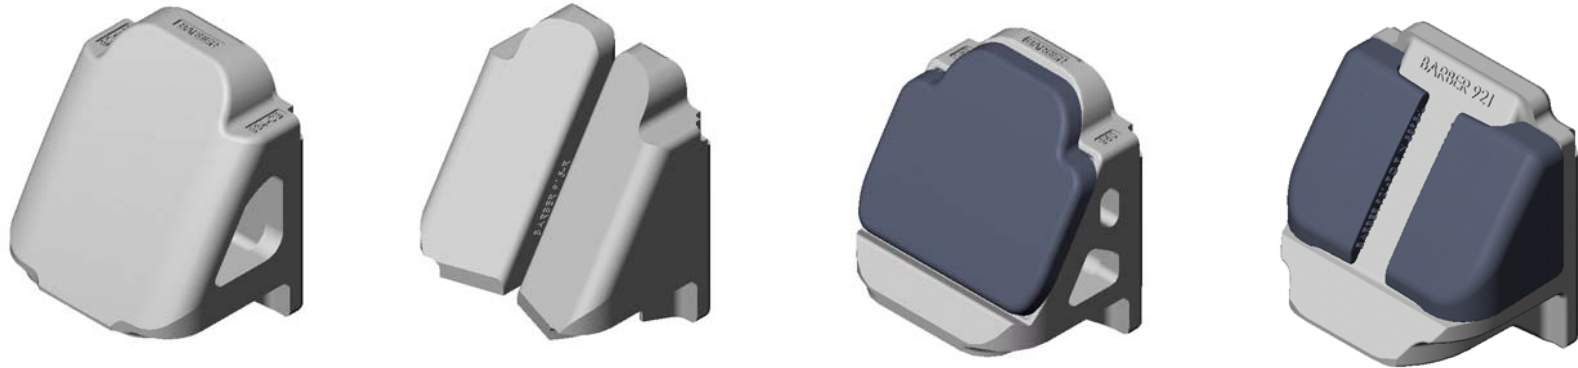

Truck Type	Iron Wedge	Split Wedge*	LifeGuard Wedge	TwinGuard Wedge**
S-2-A	604-C	-	-	-
	606-C	-	-	-
	609-D	955-SW	913-LG-N 913-LG-R	-
	762-C	-	-	-
S-2-B S-2-C	675-C	-	-	-
	678-C	-	-	-
	787-C	925-SW	888-LG-N 888-LG-R	911-PC
	762-C	-	-	-
S-2-D	876	905-SW	877-LG	921-PC
S-2-HD S-2-HD-9C	834-CB	915-SW	950-LG	916-PC
S-2-E	917-C	945-SW	-	-

* Bolster pocket must have square sidewalls and an insert must be installed in the pocket to use split wedge.

** Bolster pocket must have square sidewalls to use TwinGuard wedge.

Always Use Original
Barber Parts



Wabtec, Standard Car Truck

6400 Shafer Court – Ste 450, Rosemont, Illinois 60018, U.S.A.
Telephone: 847-692-6050 Fax: 847-692-6299

Not A
Controlled
Document